


*Necessary preliminary tasks:*


- Remove right headlight
- Remove pull cable for bonnet/hood locks (in engine compartment)
- Remove centre radiator grille

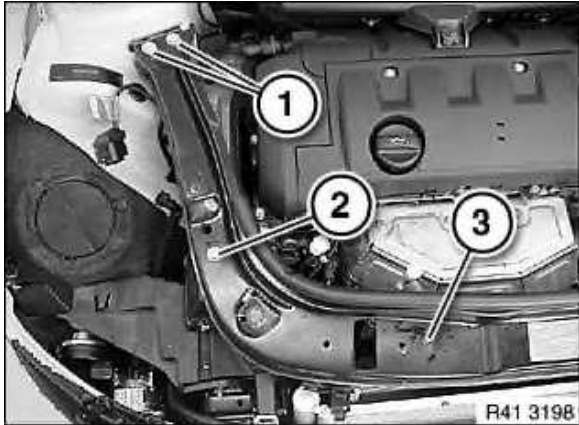

Release screws (1).

Tightening torque 51 11 7AZ .

Unfasten screws (2 and 3).

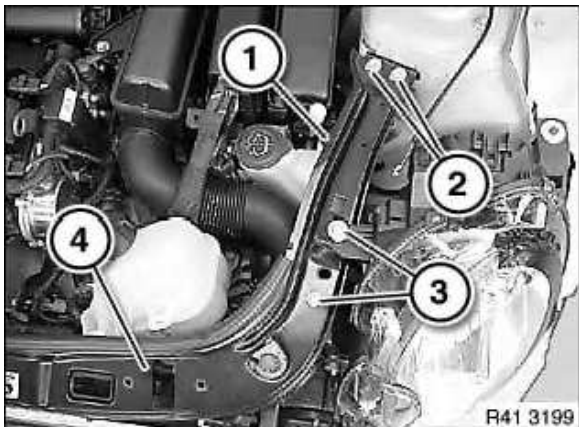

Release clip (1).

Release screws (2).

Tightening torque 51 11 7AZ .

Release screws (3) and feed out lock bridge (4) towards front.