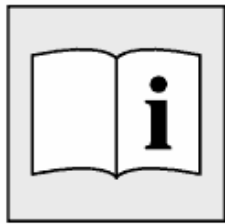



**Important!**

Brake discs must only be replaced in pairs (per axle).
Fit new brake discs only together with new brake pads.

*Necessary preliminary tasks:*

- Remove front brake pads

After completing work, read and comply with notes on braking in new brake discs / brake pads.

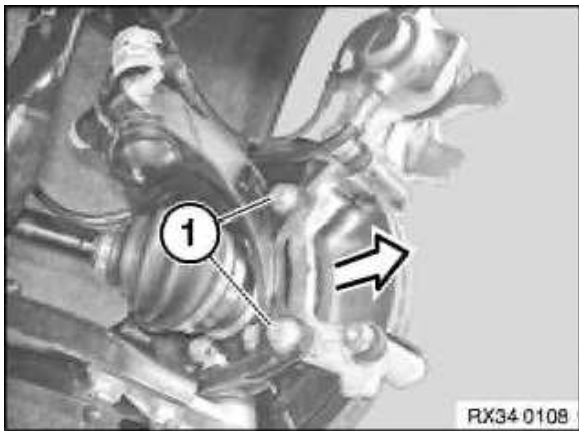


Release screws (1).

Remove brake caliper with brake anchor plate in direction of arrow and tie up.

Installation:

Tightening torque 34 11 2AZ .

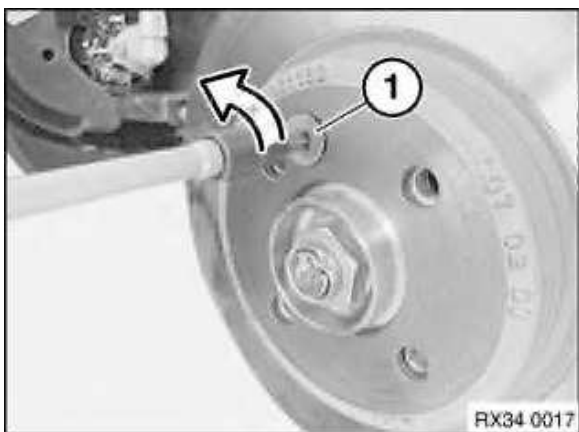

Release screw (1) and remove brake disc.

Installation:

Replace screw (1).

Tightening torque 34 11 1AZ .

Clean contact face of wheel hub thoroughly and remove any traces of rust if necessary.

Irregularities in the contact surface can cause distortion in the brake disc!



Important!

When removing the brake disc: On no account strike the friction ring with a hammer or similar object! If necessary, carefully tap with a rubber hammer against the brake disc nave.