


Necessary preliminary tasks:

- Remove front wheel

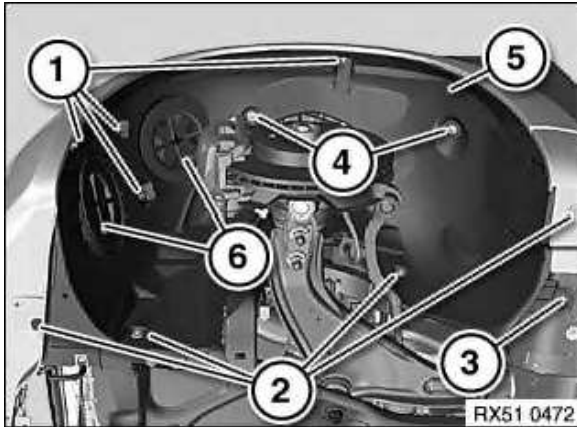

Release screw rivets (1 and 2).

Unscrew nut (3).

Release screws (4) and remove wheel arch cover (5).

Replacement:

If necessary, remove covers (6).