
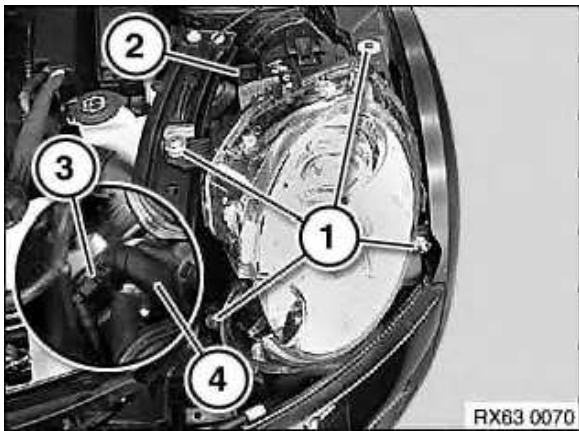


**Warning!**

Follow instructions for handling light bulbs (exterior lights).

**Important!**

Read and comply with notes on protection against electrostatic damage (ESD protection).

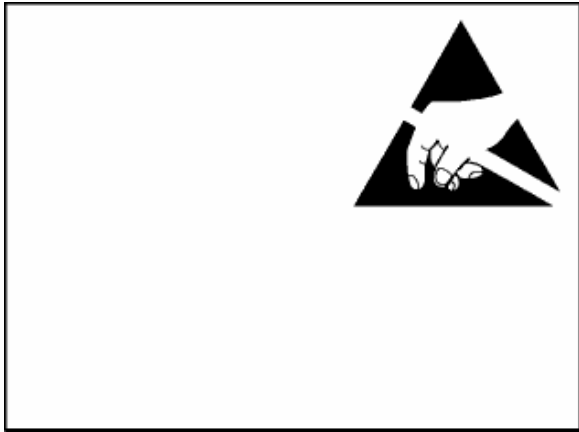


Release screws (1). Tightening torque 63 12 1AZ .
Disconnect plug connection (2).

Version with headlight washer system:


- Pull headlight forwards slightly and detach hose connection (3) from high-pressure nozzle (4).

Remove headlight.

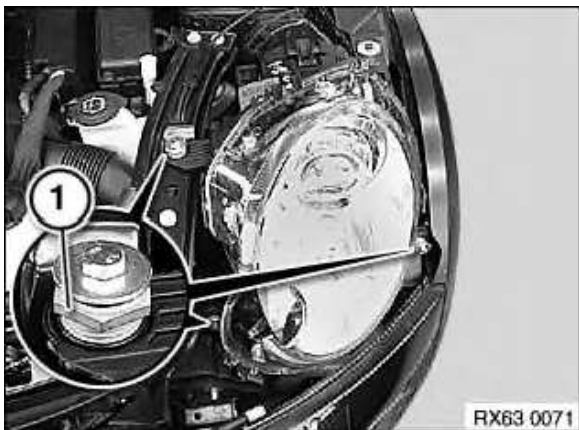

Installation:

- Adjust gap dimensions by means of adjusting screws (1)
- Adjust headlight

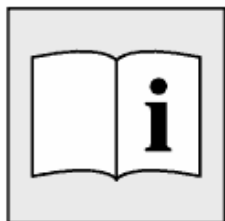

Replacement:

- Modify halogen bulb for headlight
- Modify halogen bulb for high-beam headlight
- Modify bulb for direction indicator
- If necessary, modify high-pressure nozzle of headlight washer system
- Modify adjusting screws