



Necessary preliminary tasks:


- Remove wheel
- Remove rear right underbody panelling



Important!

The brake pad wear sensor must be replaced once it has been removed (brake pad wear sensor loses its retention capability in the brake pad).

If a brake pad sensor that has already been ground has to be replaced even though the minimum brake pad thickness has not yet been reached, you must observe the following: The new sliding contact must be filed down with a file to the same length as the ground sliding contact.

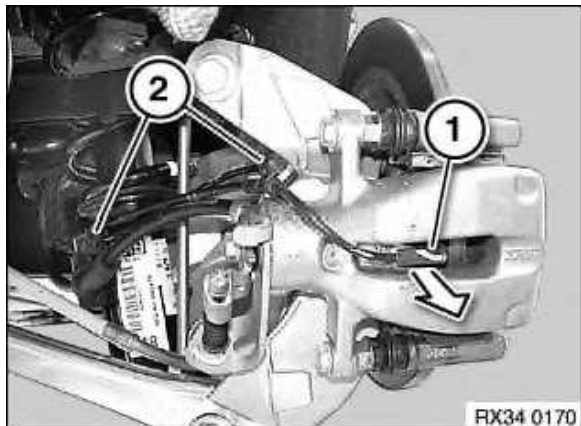


Detach brake pad sensor (1) in direction of arrow from brake pad.

Unclip brake pad sensor (1) from holder (2).

Installation:

Make sure brake pad sensor (1) is correctly seated in brake pad.

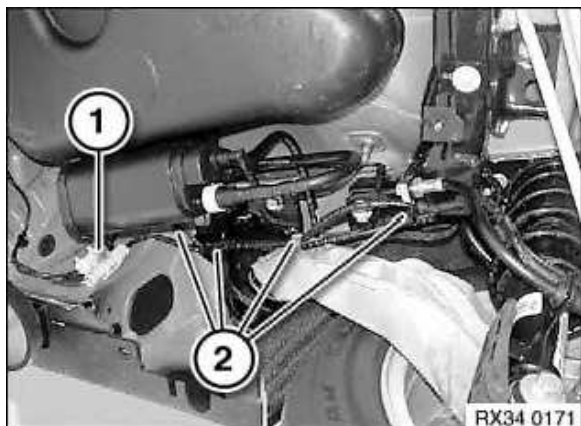

Disconnect plug connection (1).

Unclip brake pad sensor from holder (2).

Installation:

Make sure plug connection engages correctly.