



*Necessary preliminary tasks:*


- Remove wheel
- Remove rear right underbody panelling



**Important!**

**The brake pad wear sensor must be replaced once it has been removed (brake pad wear sensor loses its retention capability in the brake pad).**

If a brake pad sensor that has already been ground has to be replaced even though the minimum brake pad thickness has not yet been reached, you must observe the following: The new sliding contact must be filed down with a file to the same length as the ground sliding contact.

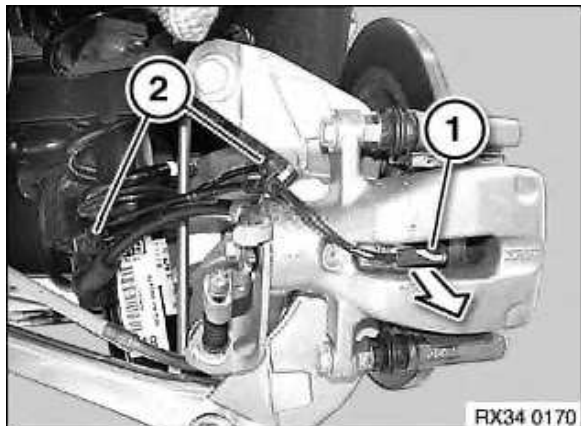


Detach brake pad sensor (1) in direction of arrow from brake pad.

Unclip brake pad sensor (1) from holder (2).

*Installation:*

Make sure brake pad sensor (1) is correctly seated in brake pad.

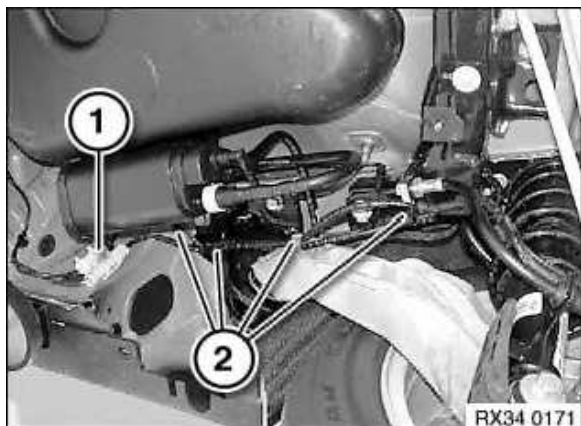

Disconnect plug connection (1).

Unclip brake pad sensor from holder (2).

*Installation:*

Make sure plug connection engages correctly.