


**Warning!**


Follow instructions for handling light bulbs (exterior lights).

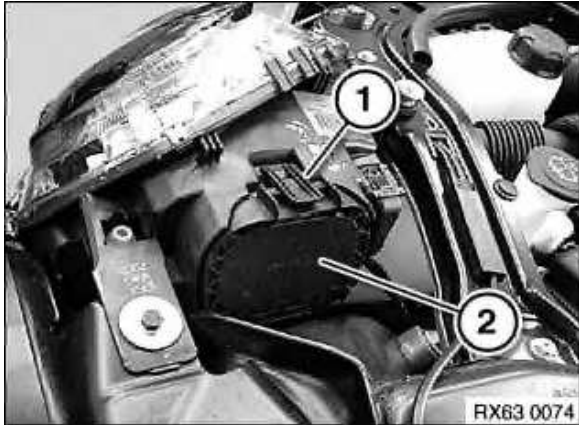

Unlock retaining tab (1) and remove cover (2) from headlight.

*Installation:*

Make sure cover (2) is correctly seated on headlight.

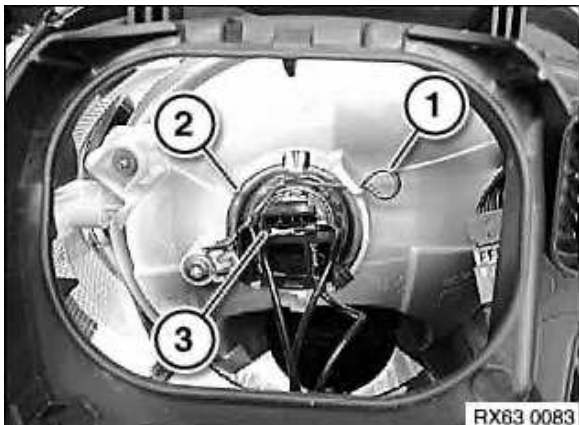

Release lock (1) and pull halogen bulb for headlight (2) out of headlight.

Disconnect plug connection (3) and remove halogen bulb for headlight (2).

*Installation:*

Make sure halogen bulb for headlight (2) is correctly seated.

Note type of bulb.