

**Special tools required:**

- 00 9 323

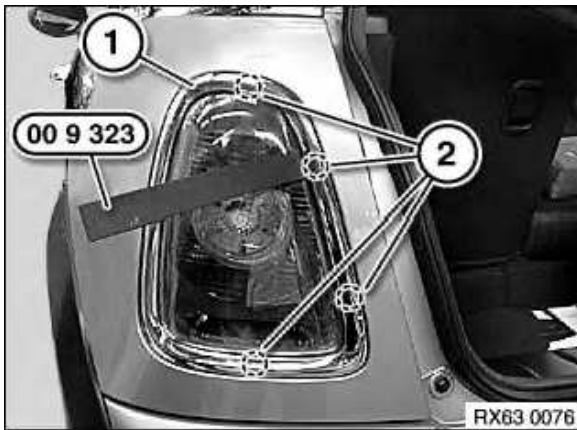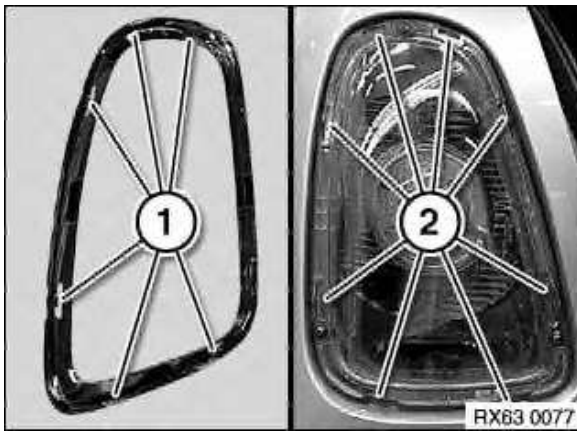

Unclip trim (1) with special tool 00 9 323 at points (2).

**Installation:**

Retaining tabs (1) and retaining catches (2) must not be damaged.