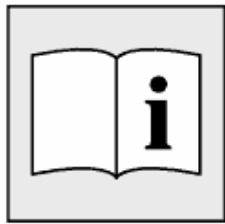



**Warning!**

Danger to life!

Mount securing fixture for vehicle on lifting platform to prevent the vehicle from slipping off or tilting down.

*Necessary preliminary tasks:*

- Lower front axle support

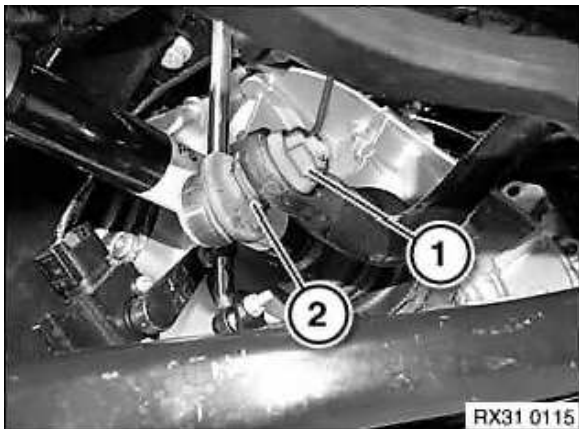


Release nut (1); if necessary, grip dihedron (2) or hexagon socket.

Installation:

Replace self-locking nut.

Tightening torque 31 35 1AZ .

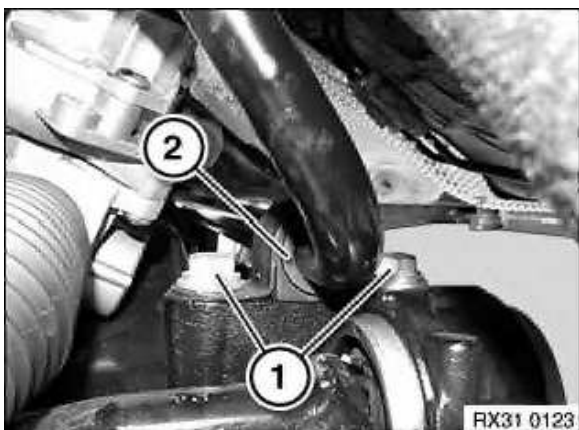

Release left and right screws (1).

Remove stabilizer (2) from control arm bracket.

Installation:

Replace rubber mount for stabilizer.

Tightening torque 31 35 3AZ .



After installation:

- Version with Dynamic Stability Control (DSC): Carry out steering angle sensor adjustment

Note:

Only cars with DSC are fitted with a steering angle sensor (integrated in the steering column switch cluster).